 


CYCLIQ

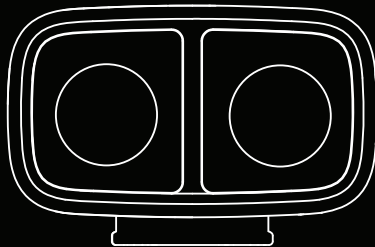

FLY12
SPORT

QUICK START GUIDE

What's in the box



Fly12 Sport



64GB micro SD
card (preinstalled)



Handlebar
mount



 
22.2mm handlebar
adapter



Universal
adapter



M5 screw for
universal adapter




USB-A - USB-C
cable




Safety
tether

 Fly12 Sport layout

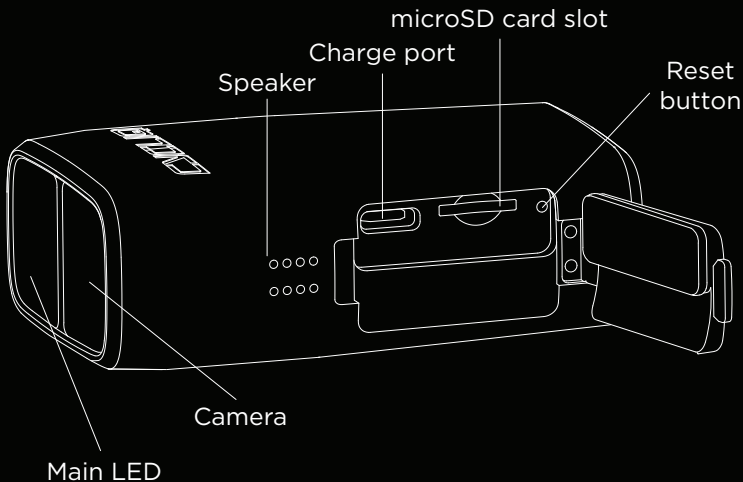

Fly12 Sport layout

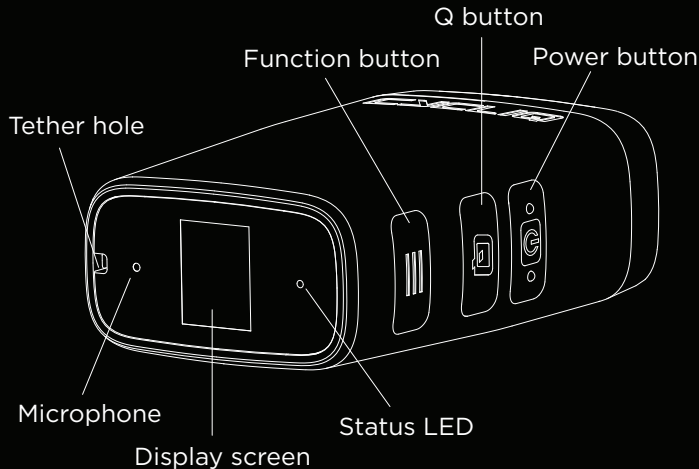 

Before your first ride

Please follow these simple steps before your first ride with your Fly12 Sport.

1. Ensure you fully charge the Fly12 Sport.
2. Ensure the Fly12 Sport port door is securely closed.
3. Ensure the safety tether is correctly attached.
4. Ensure the rotation of the display screen is correct.
5. Ensure the date and time stamps are correct.

Connecting to the Fly12 Sport for the first time

All Fly12 Sport settings can be managed using the CycliqPlus mobile app.

Connecting to your mobile device

The Fly12 Sport uses Bluetooth for connection to your mobile device. The first time you connect you will need to follow the below steps to enable Bluetooth.

Turn on the Fly12 Sport by pressing and holding the power button.


Open the CycliqPlus mobile app and ensure Bluetooth is enabled on your mobile device.

Select your Fly12 Sport from the menu.

The Bluetooth icon will appear on the Fly12 Sport's display screen when a connection is established.

The Fly12 Sport will automatically sync with the time and date settings from your mobile device when connecting to CycliqPlus.

 Mounting the Fly12 Sport

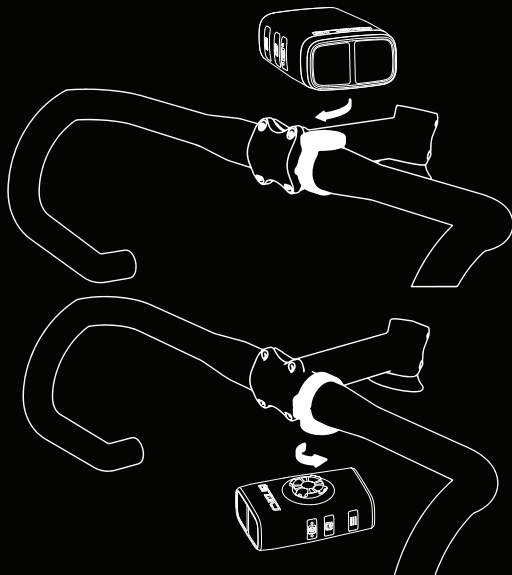

Mounting the Fly12 Sport

The Fly12 Sport comes with a handlebar mount and a universal adapter that features the Cycliq quick release system.

Attaching a handlebar mount:

1. Place the handlebar mount above or below the handlebar, depending on available space. If mounting to a 22.2mm bar install the appropriate rubber adapter then carefully torque the hex bolts to a max of 2Nm.
2. With the Fly12 Sport facing forward and at a 45° angle to your handlebar, line up the quick release male component on the Fly12 Sport with the female receptor on the handlebar mount. Place the Fly12 Sport into the mount and make a 1/8th turn until the device clicks into a forward-facing position.

Note

If installing the Fly12 Sport using the universal adapter and a finned style mounting system, the process of operating the 1/8th.

Light modes

You can cycle through the available light modes using the power button.

Camera Only (*Main LED off*)

Solid High (*Main LED solid with high intensity*)

Solid Low (*Main LED solid with low intensity*)

Flash High (*Main LED flashing with high intensity*)

Flash Low (*Main LED flashing with low intensity*)

Pulse High (*Main LED pulsing with high intensity*)

Pulse Low (*Main LED pulsing with low intensity*)

Organic (*Random generation of high and low intensity*)

All light modes are available by default on the Fly12 Sport. You can customise the available light modes on CycliqPlus so only your preferred modes are available.

The light mode last used will be remembered when the Fly12 Sport is turned off.

Display screen - home

The display screen on the back of the Fly12 Sport allows you to control many features and functions with ease. The display screen can be toggled by pressing the function button.

The home screen is the default display on your Fly12 Sport.

The Bluetooth icon is shown when a connection is established.


Battery Status

4 bars = 75% to 100%

 
3 bars = 50% to <75%

2 bars = 25% to <50%

1 bar = 1% to <25%

 18:45

SOLID
HIGH



The current active light mode is displayed.

To toggle available light modes press the power button.

Display screen - rotation

The rotation screen shows the orientation the Fly12 Sport is set to record in.

Changing rotation

To rotate the orientation of the Fly12 Sport, press and hold the function button (for approximately 3 seconds).

Correct rotation

If the hold to rotate prompt is displayed upside down, hold the function button to change orientation, so the screen reads right way up.



Mounted above
your handlebars

HOLD TO
ROTATE



 
Mounted below
your handlebars

HOLD TO
ROTATE


Looping function

The Fly12 Sport was designed as a set and forget cycling safety device. The footage is set to record on a continuous loop so you don't have to worry about running out of storage space on the microSD card.

When there is no free space left to record on your microSD card, the Fly12 Sport will start recording over the oldest video file first. Any locked footage saved by the Fly12 Sport will not be overwritten by the looping function.

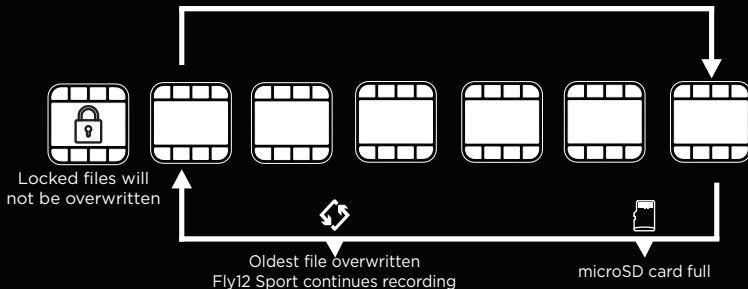

Incident Protection

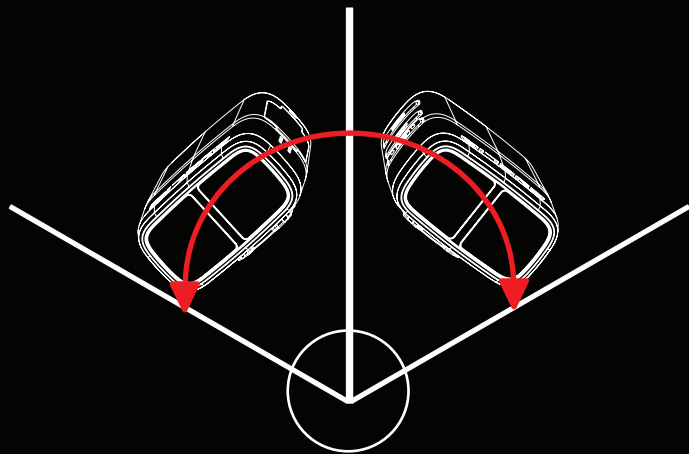 

Incident Protection

Incident protection mode has been designed to save your footage from major incidents without being recorded over.

Incident protection mode is activated when the Fly12 Sport is tilted more than 60° from vertical (or 30° from the ground) for more than five seconds. If this happens, the Fly12 Sport will lock the current and immediately preceding video file then continue recording as normal.

The incident screen is displayed to confirm your incident has been saved and files locked.



Image capture

Manual footage capture

If you witness an event that you want to capture and retain when riding, simply press the Q button. This will lock the current and preceding video files.

A lock icon will be shown on the display screen to confirm the manual footage capture.

Still image capture

The Fly12 Sport can take a still image while recording video. You can do this by holding the Q button for approximately 3 seconds.

The still image capture is confirmed by a 'snapshot' sound. A camera icon will be shown on the display screen to confirm the still image capture.



MANUAL



Using your footage

Accessing your footage

After your ride, you can access your footage in a number of ways:

1. Connect the Fly12 Sport to a PC or Mac using the USB cable.
2. Remove the microSD card and read data using your PC or Mac.
3. Using a Cycliq On The Go Card Reader.

Editing footage

You can edit your footage using the CycliqPlus desktop and mobile app. From here you can also overlay Strava metrics and share highlights from your ride.



UpRide your ride

Evidence makes a difference!

If you've had an incident on the roads, been subjected to a close pass or capture any other dangerous activity, upload it to www.UpRide.cc and use your footage to help make cycling safer.

Then share your UpRide with your community and help spread the word. We are all in this together and we all have a role to play in making the roads safer for all road users.

Record your ride. Make it count. UpRide it.

Tech specs

Feature

Specification

Recording

1280x720p @120fps
1920x1080p HDR @30fps
1920x1080p @60fps
2560x1440p @30fps
2880x2160p UHD @24fps

Lens angle

135° wide viewing angle

Video format

MP4

Image stabilisation

6-axis electronic image stabilisation

Lumens

400lm max output

Weight

148g / 5.22oz

Dimensions

29.5mm (H) x 50.7mm (W) x 81.2mm (L)

Battery

3000mAh, 11.10Wh (up to 7 hours)

Port

USB-C to charge & connect to PC & Mac

Bluetooth®

BT 5.1

CYCLIQ



Scan for more information

CYCLIQ.COM